



OFFRAMP

INSTRUCTIONS

Kit Number: OR-CVG-004

Thank you for choosing the Off Ramp Cam cover will need an EVO style counterclockwise rotation ignition to work properly. All pictures below were taken on our cam cover cut away for easy viewing. We hope you enjoy the product and we ask that you follow these instructions very closely. Doing so will save your time and ensure that the customer's experience with their new reverse is a positive one.

Pictured below is how the SUPPLIED Seal must be installed, flat Side Of Seal facing out.



Patent#:2025300358400



OPERATION STEPS

1 Remove the cam cover from the original car.


2 The stock cam bolt and

washer must be removed as shown in the following figure


3 Install the cam end adaptor and special bolt ,supplied with

positioning and the washer (inset picture)



4 After determining the position will not be used.

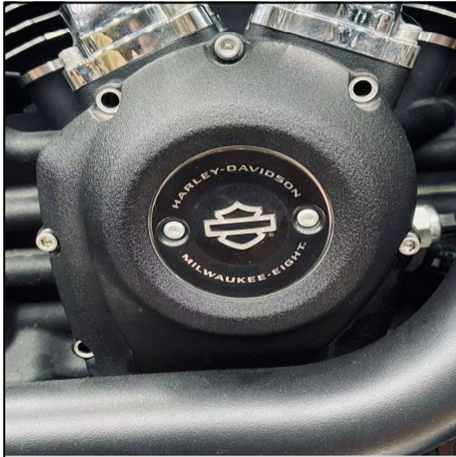

kit ,and make sure that the slot in the cam end adaptor is between 8 and 9 o'clock

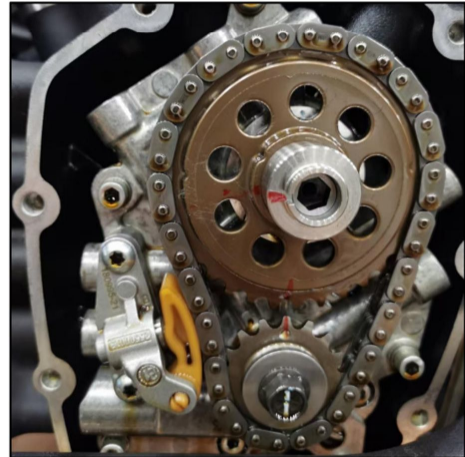

of the CAM notch,tighten the bolt and press the timing cover to decorate the fire cup.

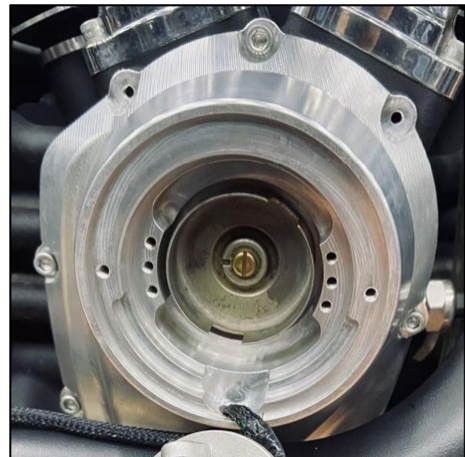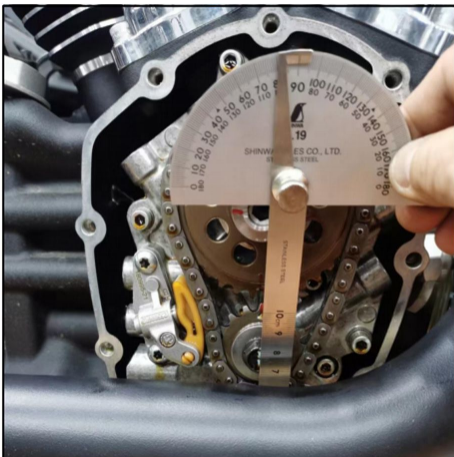



PART# OR-001-M8-CAM
COVER FITS M8
APPLICATIONS.
PART# OR-002-M8/TC CAM
END
ADAPTOR
PART# OR-003-M8/TC
SPECIAL CAM END BOLD
PART#0R-004· M8/ TC
SEAL